


QUAD 44

Circuit diagram with effect from Serial No.23001 (March 1984)


Modifications:

- (1) Serial No. 25800 (June 85) – Mains earth connected to chassis (signal earth)
- (2) Serial No. 28500 (April 86) – Phono sockets fitted to all signal inputs and outputs.
- (3) Serial No. 29900 (Jan 87) – Voltage selector omitted.
Voltage range changed by links inside power supply box.

IC101 REPLACED 4-10-94

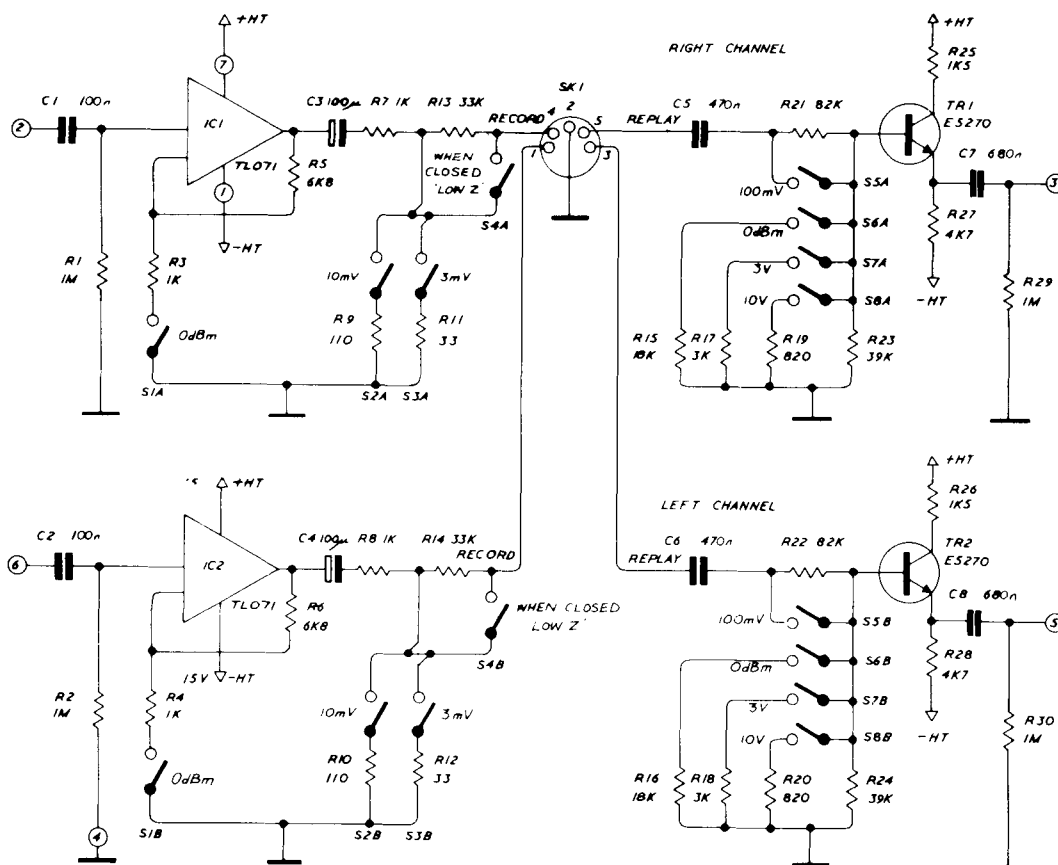


TAPE RECORD/REPLAY DRWG 12495 ISS 2 – USED WITH PCB M12496 ISS 3



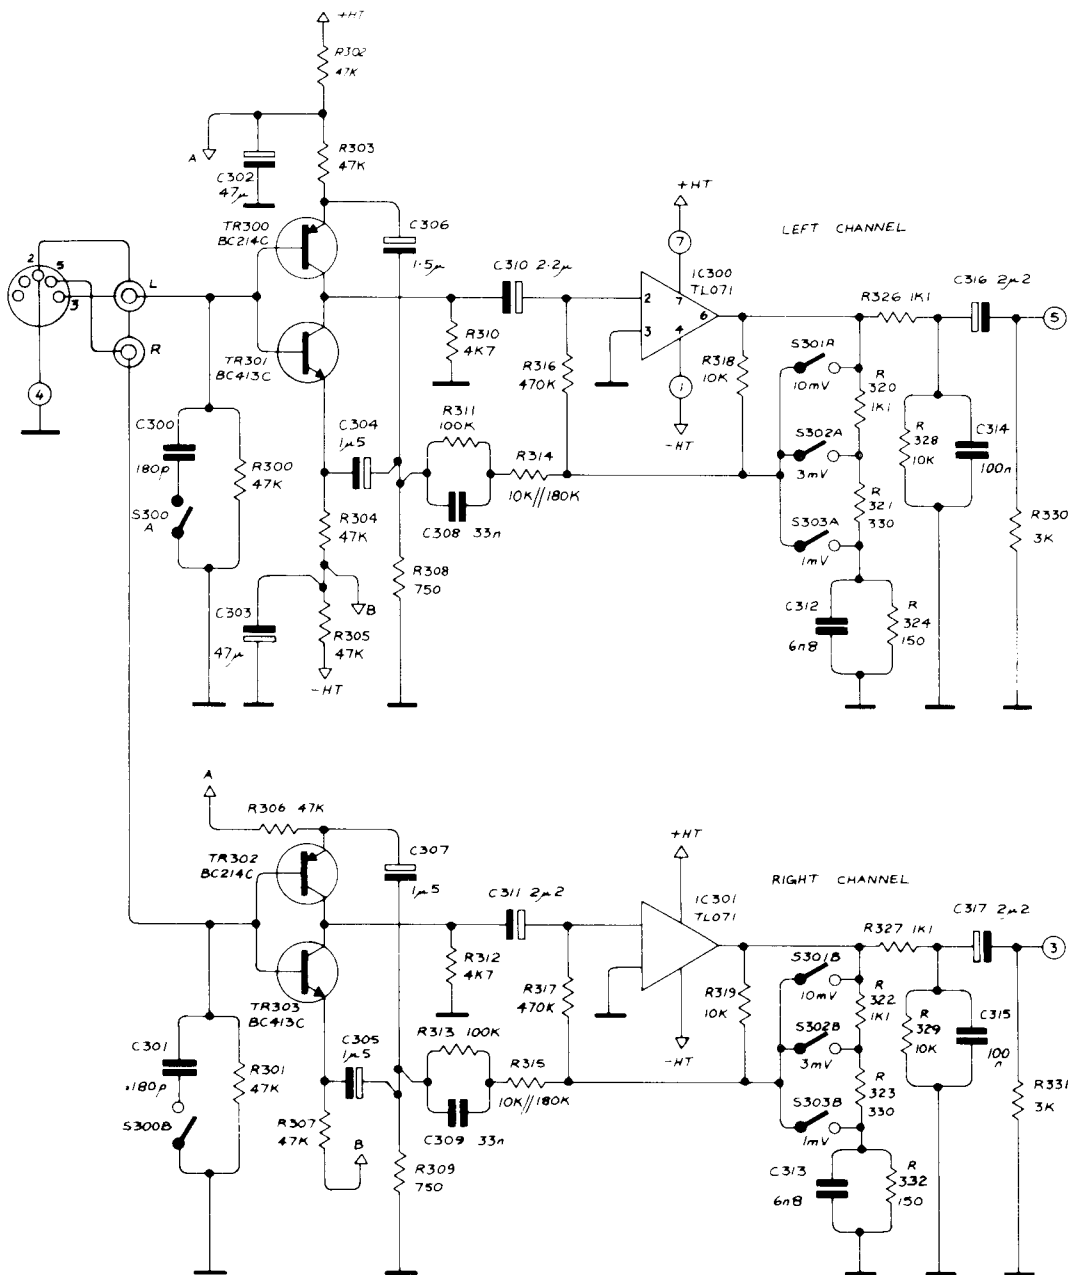


DISC DRWG 12518 ISS 2 - USED WITH PCB M12515 ISS 5



VARIABLE VALUES

TYPE	4A	4B	4C
SENSITIVITY	200 μ V	100 μ V	400 μ V
R605, R606	1k2	560R	470R
R607, R608, R609, R610	12k	5k6	33k
R613, R614	10R	4R7	18R
R621, R622	820k	820k	1M
C605, C606, C607, C608	33 μ	68 μ	15 μ

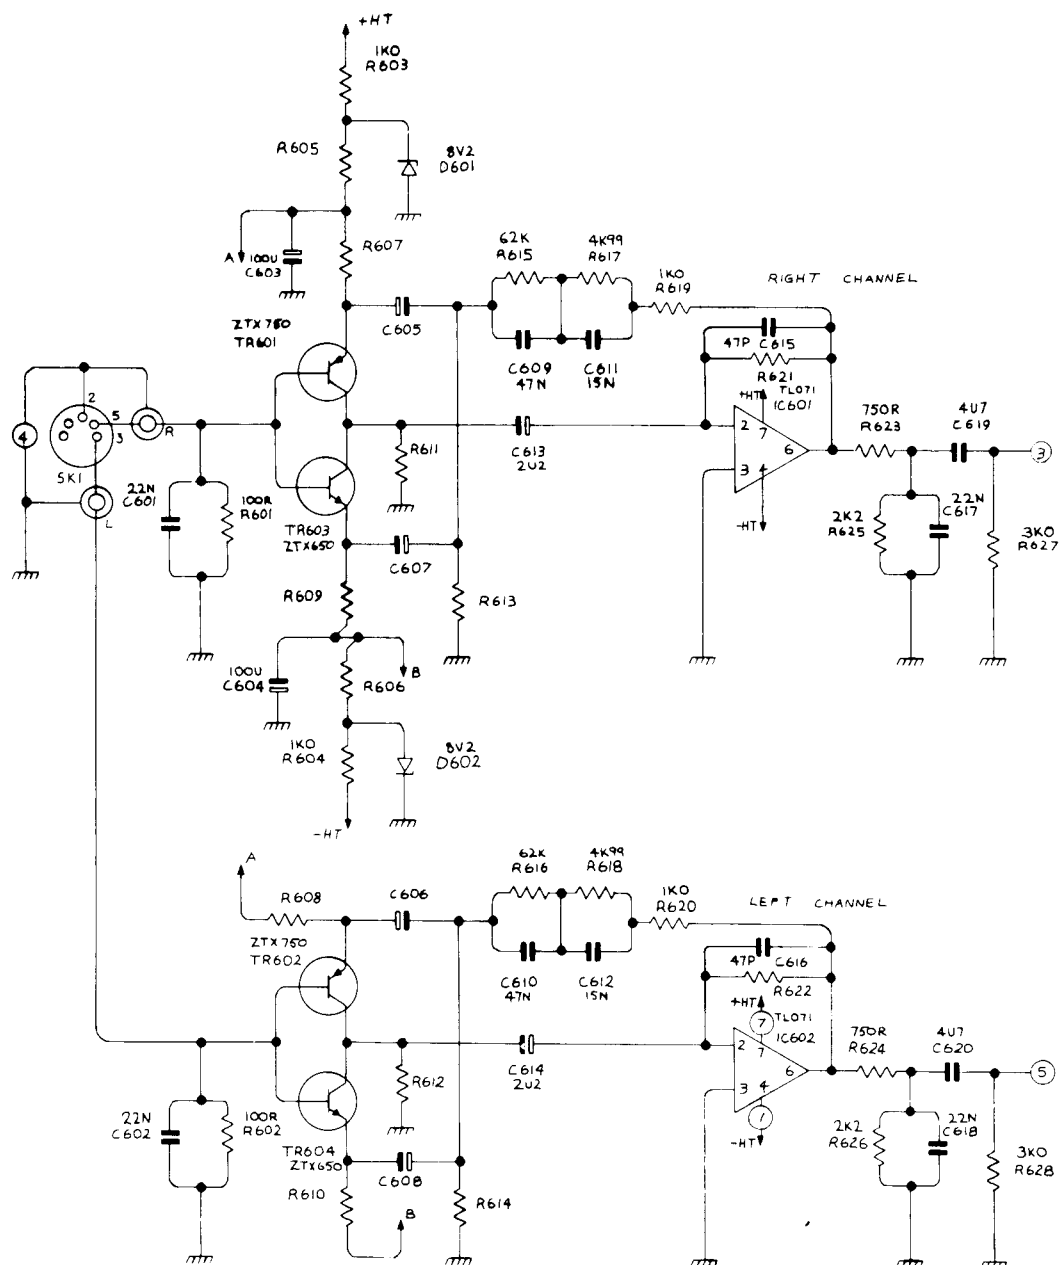

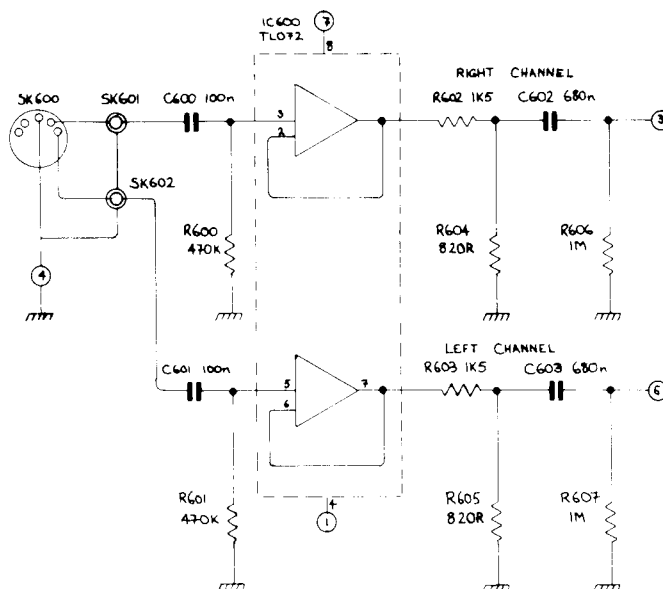
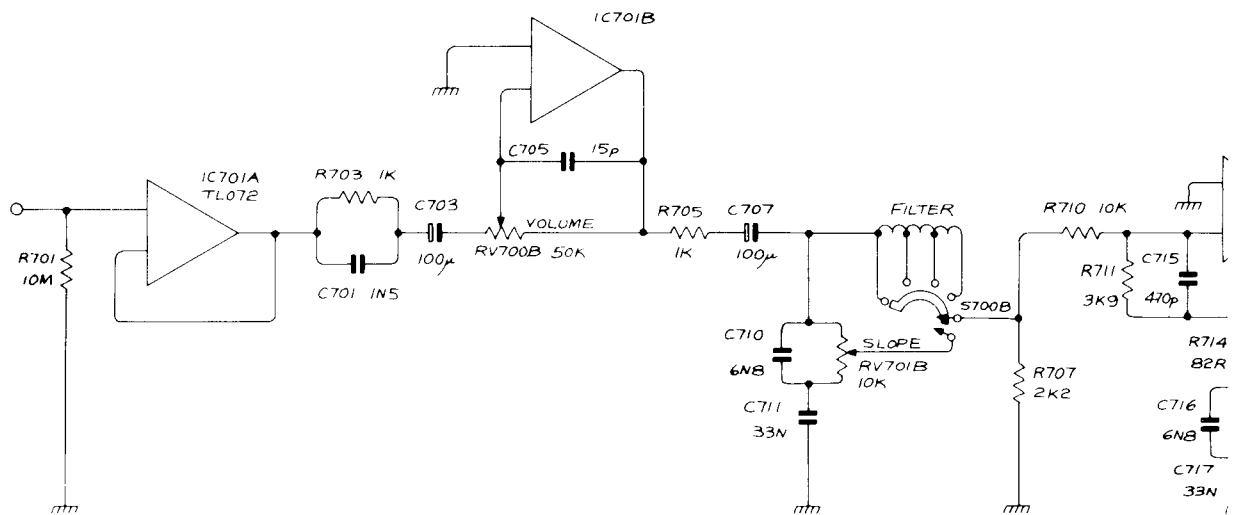
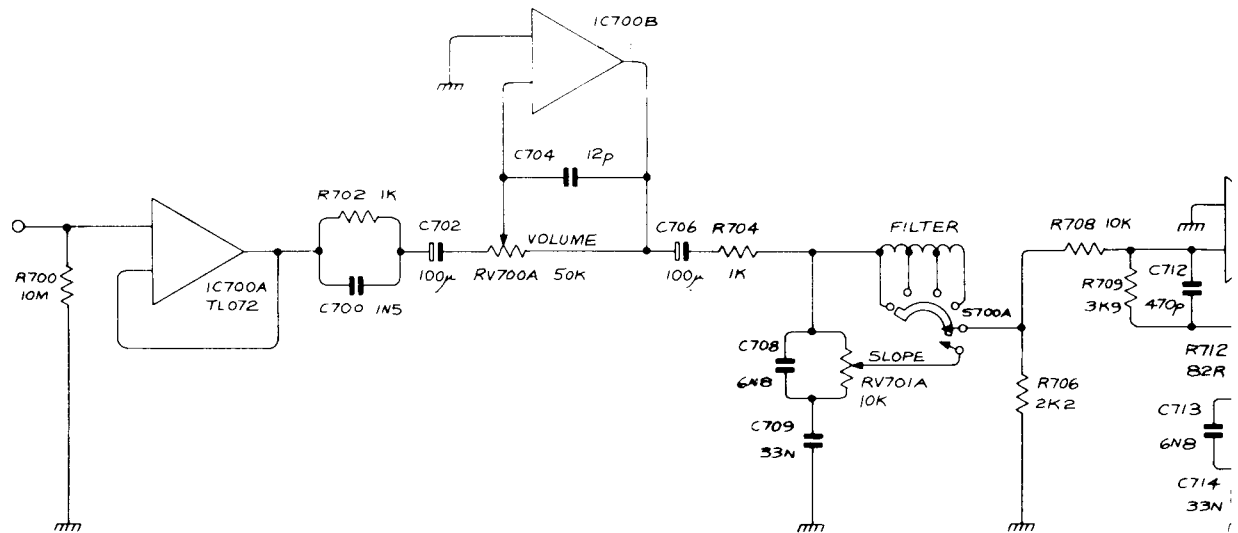


USED WITH PCB M12784 ISS 1

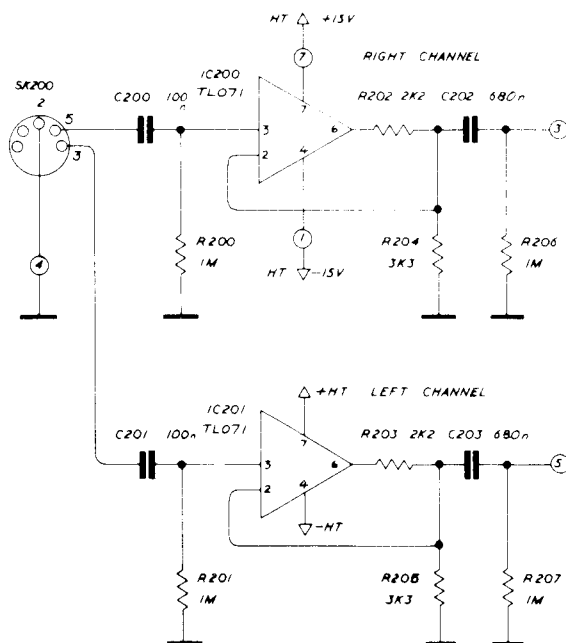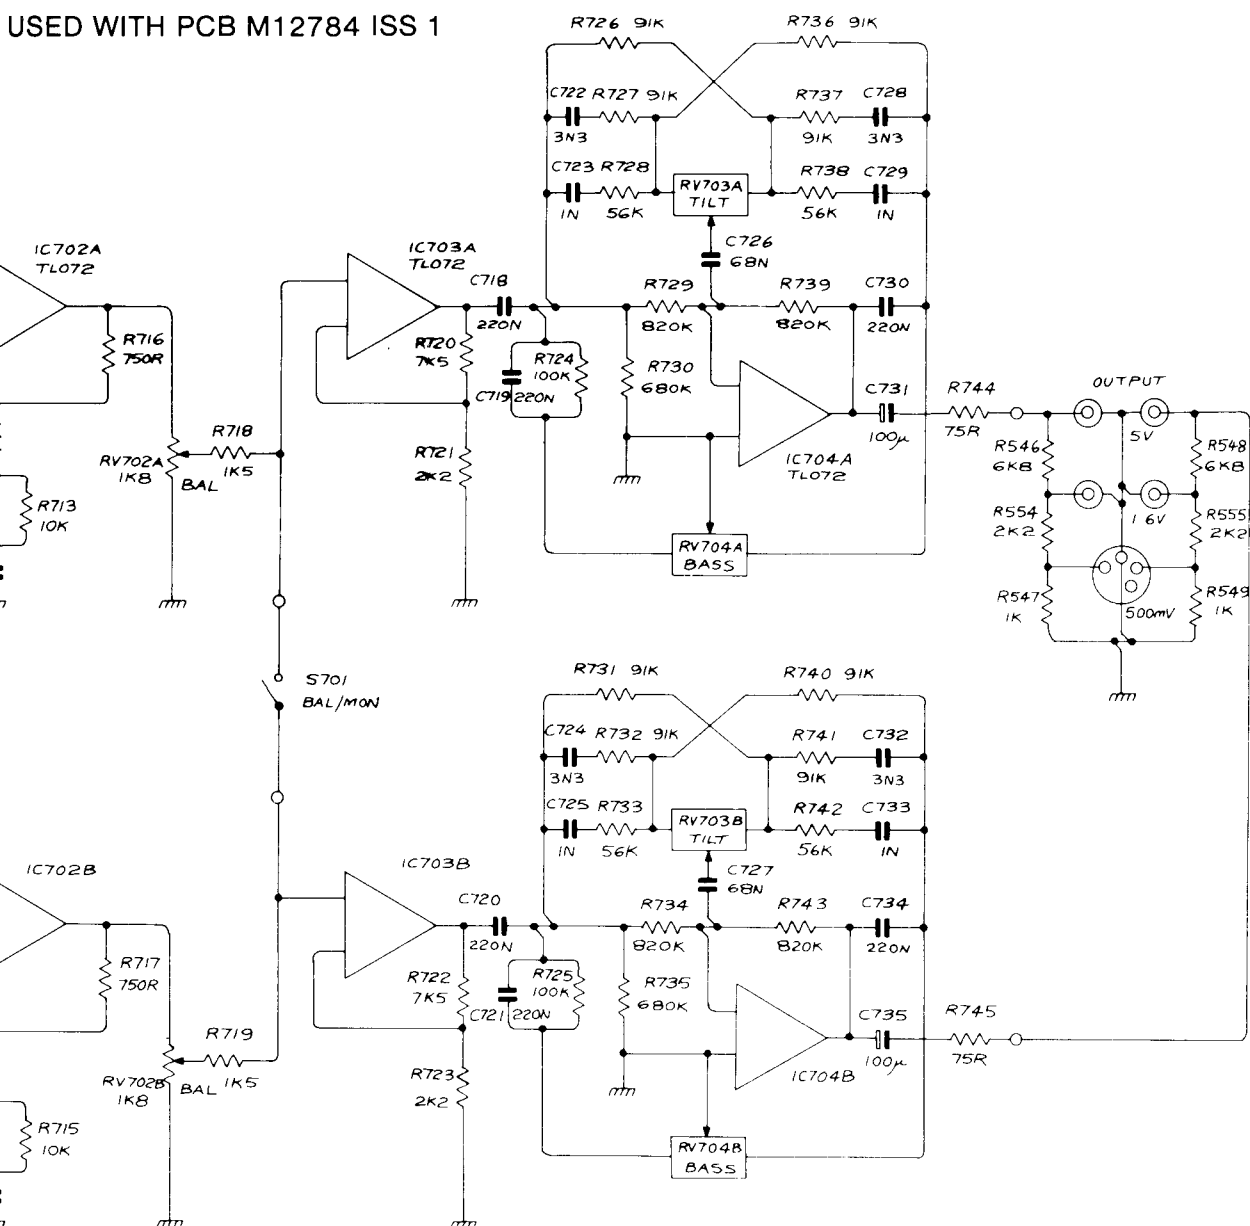

RADIO DRWG 12517 ISS 2 - USED WITH PCB M12511 ISS 2

MOTHER BOARD AND POWER SUPPLY
 DRWG 12519 ISS 2
 USED WITH
 PCB M12436 ISS 5

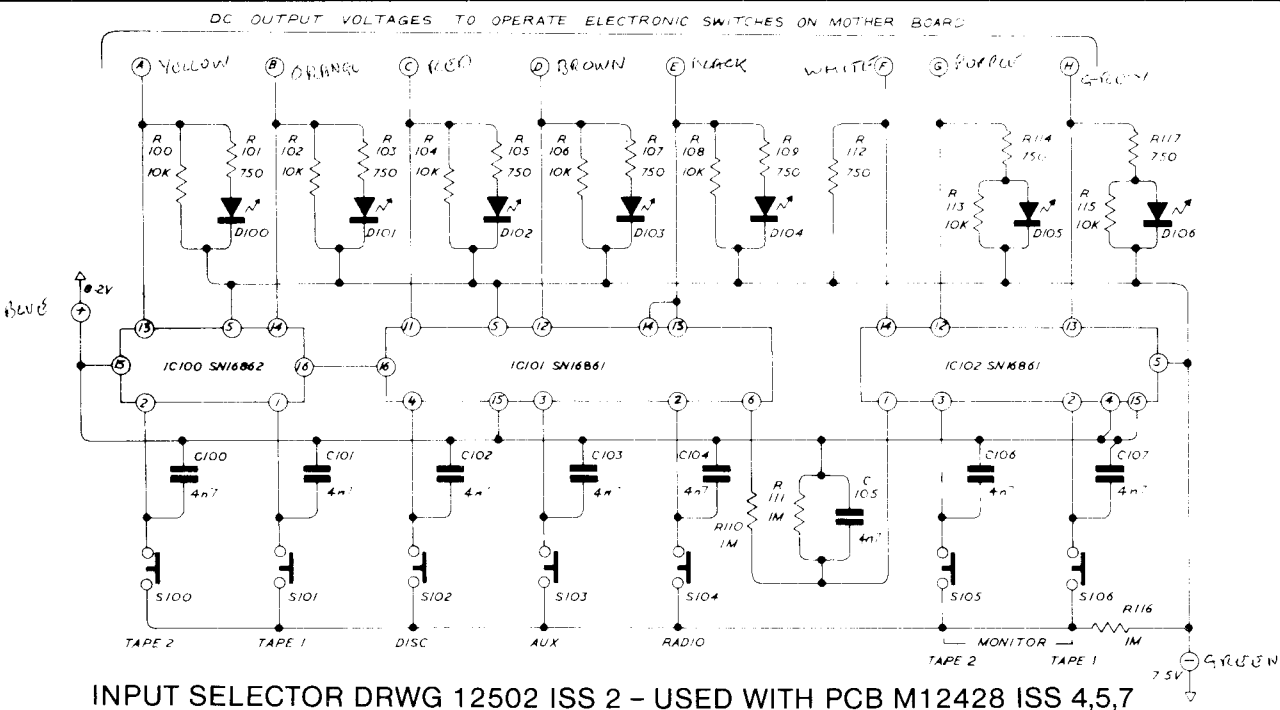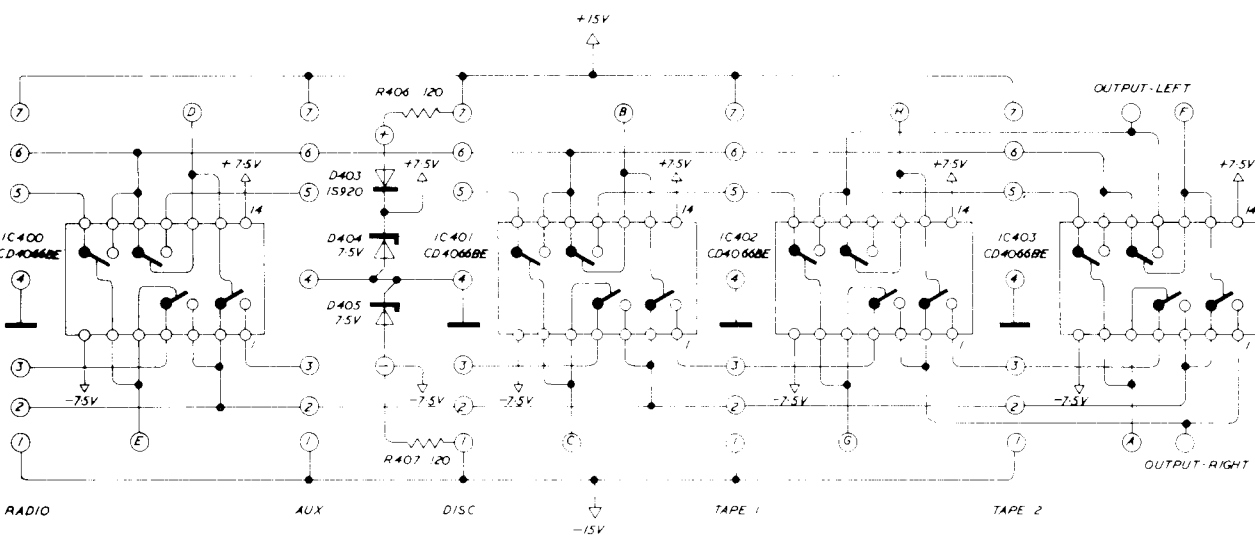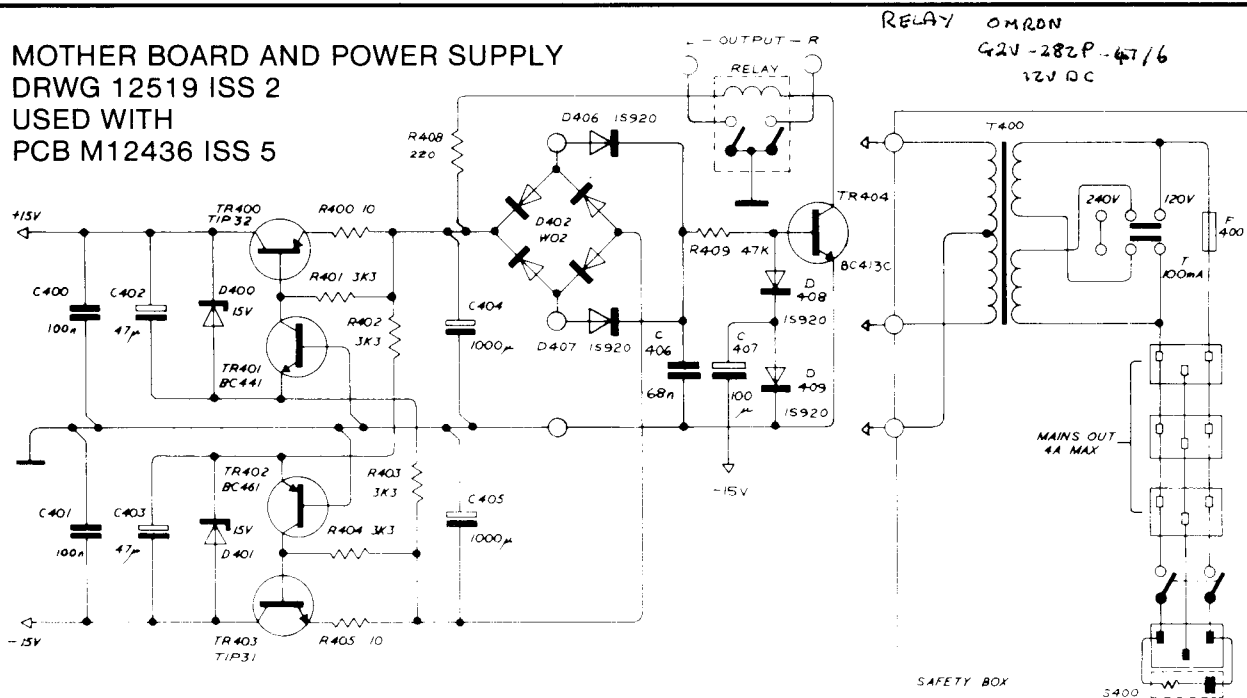

INPUT SELECTOR DRWG 12502 ISS 2 - USED WITH PCB M12428 ISS 4,5,7