

Fig. 8

Motor Pulley Safety Fuse

Fuse ring (12) melts under overload and motor free-wheels. To replace fuse ring, remove circlip (13) - note: all parts are under spring tension. Remove remains of old fuse ring. Re-assemble as shown in illustration. Order number of fuse ring (5120-144) = 426/358.