


Type Memphis SQR 88

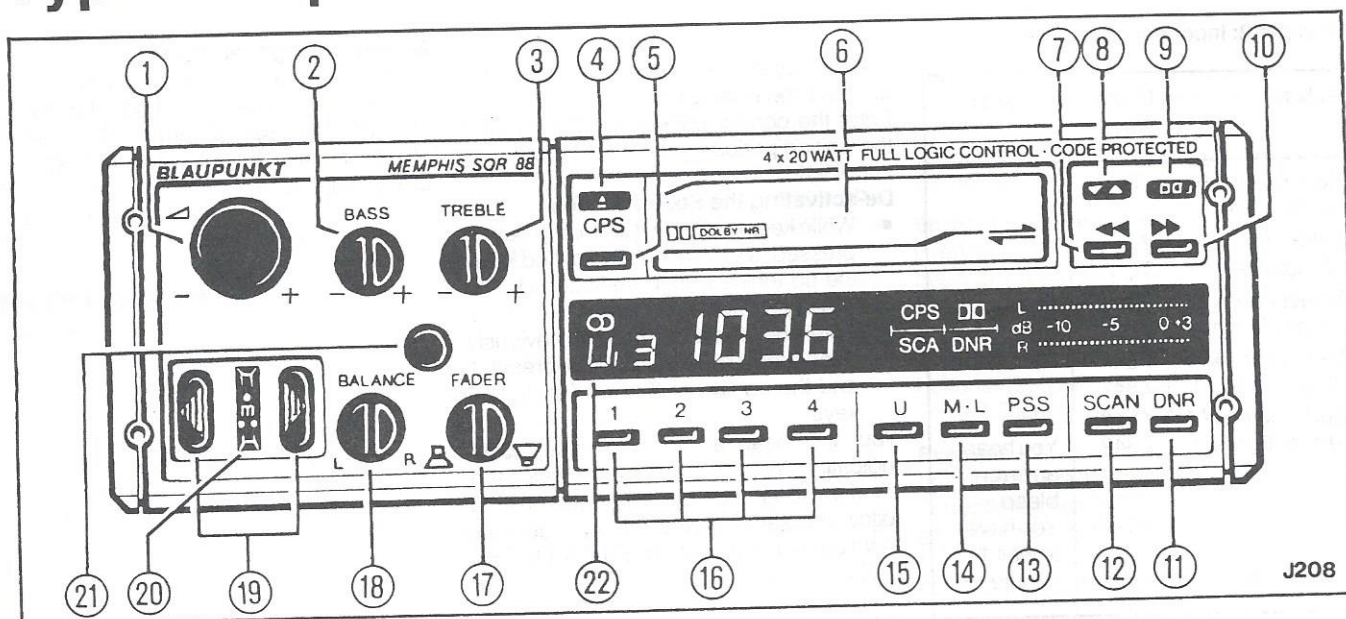

J208

- | | | |
|---|--------------------------------------|--|
| 1 On/Off switch/volume control | 9 Button (Dolby NR) | 17 Fader |
| 2 Bass control | 10 Button ►► (fast tape forward) | 18 Balance control |
| 3 Treble control | 11 DNR™ button | 19 Search tuning rocker switch - station selection |
| 4 Cassette eject ▲ | 12 SCAN button | 20 Search tuning sensitivity switch/Manual tuning |
| 5 CPS switch | 13 PSS button (Preset Station Scan) | 21 Receptacle for CD walkman |
| 6 Cassette aperture | 14 Button M - L | 22 Display |
| 7 Button ◀◀ (fast tape rewind) | 15 Button U | |
| 8 Track selector switch and Track indicator | 16 Buttons 1,2,3,4 (station presets) | |