


3. 5. Telephone Connections

Telephone connections should be made on the customer side of the Network Terminating Point (NTP), following established procedures and techniques. Figure 3.7 illustrates the Connection Box and the cable assembly used by the EuroRoute.

Figure 3.7 Distribution Wiring

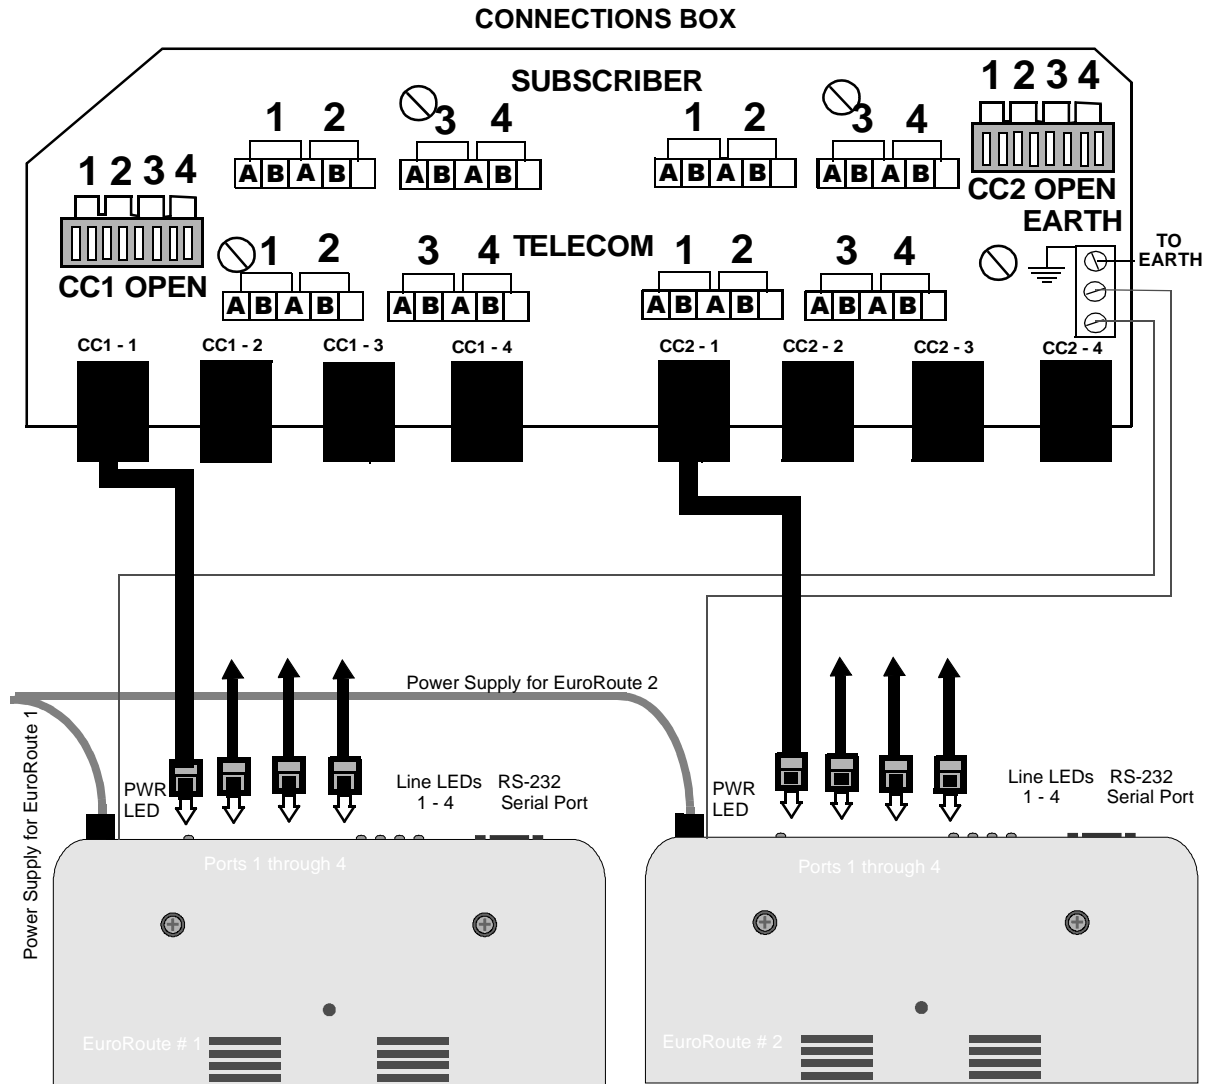

Note: A = the TIP WIRE and B = the RING WIRE.